

Getting Started

Arranger UI Creator Controller Installation

Step 1 – Connect the Arranger IPEXAR-UIC Controller to a local area network (LAN) via the controllers RJ45 LAN connection.

Step 2 – Connect a PC to the same LAN and login to the Arranger controllers web server at IP Address 169.254.1.1. A license key is required for this step. Contact your Liberty AV rep if you do not have this.

- [VIDEO](#) – Connecting to the Arranger Controller

Once connected to the Arranger controller web server, you will have access to the following documents

- **SOFTWARE MANUAL** – Arranger UI Creator User Manual
- **API** – Arranger UI Creator API Guide

Step 3 - Connect AV devices to be controlled by Arranger on the same LAN, configure IP addresses

- Note that IP devices and endpoints that you want control will need to be in the same Network ID range as the Arranger controller i.e. 169.254/16. You can set the Arranger controller to DHCP or static IP mode if necessary.

Need training? [Contact us!](#)