

NOTICE:

- ◆ The latest firmware update available for the Liberty L3NVR3216POE requires a two-step firmware update process.
- ◆ Customers with firmware revision v4.6.1610.0000.206.1.4.53.6 will first need to update to version v4.6.1610.0000.206.1.4.53.7, then update to the latest available firmware v4.6.1610.0000.206.1.4.53.10.
- ◆ The L3NVR3216POE cloud update feature makes updating to the latest available firmware quick and easy.



Figure 1

INSTRUCTIONS:

Step 1. Log into the NVR and right click to the **Main Menu** interface.

Step 2. From the **Main Menu** got to the **System Menu** and click on **Maintenance**. (See Figure 1)

Step 3. Click on the **Cloud Update** icon. (See Figure 2)

Step 4. The NVR will retrieve and install the first firmware needed (.7) and reboot after installing. **DO NOT unplug the network or power cables while the FW is installing.**

Step 5. When the NVR has fully re-booted log in and enter the **Main Menu** interface, then **System Menu**, then click on **Information** to verify your firmware has updated to version ending in .7. (See Figure 3)

Step 6. Once you have verified .7 firmware installed correctly, repeat steps 1-5 to cloud update to the latest .10 version. (See Figure 4)

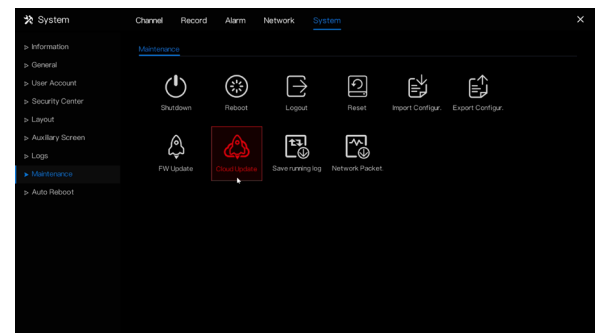 


Figure 2

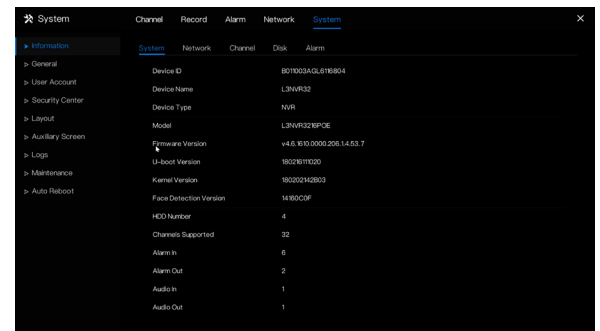


Figure 3

If you should have any questions or issues with the two step Firmware update on the L3NVR3216POE please reach out to tech support for assistance. Tech support is available Monday – Friday from 6:30am to 4:00pm Pacific time and can be reached at 855-388-7422 or by email at securitysupport@libertyonline.com.

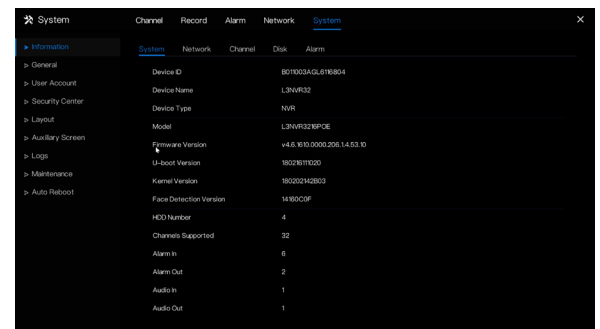 


Figure 4