

Liberty

DL-44E-H3-KIT

Owners Manual



4x4 HDMI / HDBaseT 3.0 Matrix Switcher Kit with 4 HDBaseT 3.0 Receivers Included

Preface

Read this user manual carefully before using the product. Pictures shown in this manual are for reference only. Different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till April 14, 2023. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



SAFETY PRECAUTIONS

To ensure the best performance from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment.
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the specifications of product may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, and please treat them as normal electrical wastes.

Table of Contents

1. Product Introduction.....	1
1.1 Features	1
1.2 Package List	2
2. Specification	3
2.1 Matrix Switcher	3
2.2 HDBaseT Receiver	4
3. Panel Description.....	6
3.1 Matrix Switcher Front Panel.....	6
3.2 Matrix Switcher Rear Panel	6
3.3 Receiver Front and Rear Panel	8
4. System Connection.....	9
4.1 Usage Precaution	9
4.2 System Diagram	9
5. Button Control.....	10
5.1 Signal Switching	10
5.2 Panel Button Locking/Unlocking	11
5.3 Status Information Inquiry	11
5.4 EDID Management	12
5.5 Audio Setting	13
5.6 Preset Setting	15
5.7 IP Address Inquiry.....	15
6. GUI Control.....	16
6.1 Signal Switching	17
6.2 Audio Setting	18
6.3 Configuration	20
6.3.1 Down-scaling.....	20
6.3.2 HDCP Setting	21
6.3.3 EDID Copy.....	22
6.3.4 EDID Setting.....	23
6.3.5 PoC	24

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

6.4 CEC Control	25
6.5 RS232 Control	27
6.6 Access Setting	28
6.7 Interface Setting.....	29
6.8 Network Setting	30
6.9 GUI Upgrade	31
7. IR Control.....	32
7.1 IR Remote Control	32
7.2 IR Pass-through Control	33
7.2.1 Control Local Input Device from Remote	33
7.2.2 Control Remote Output Device from Local	34
8. RS232 Control	36
8.1 RS232 Control Connection	36
8.1.1 Control the Matrix Switcher from Local	36
8.1.2 Control the Matrix Switcher from Remote	36
8.1.3 Control the Remote Third-party Device from Local.....	37
8.1.4 Control the Local Third-party Device from Remote.....	38
8.2 RS232 Control Software	39
8.3 RS232 Commands	40
8.3.1 System Setting	40
8.3.2 Signal Switching	44
8.3.3 Audio Setting	46
8.3.4 HDCP Setting	49
8.3.5 EDID Management	50
8.3.6 Third-party Device Control.....	52
8.3.7 CEC Control	53
9. Firmware Upgrade	55
10. Panel Drawing	56
11. Troubleshooting & Maintenance	57
12. Customer Service	58

1. Product Introduction

Thanks for choosing the professional 4x4 HDMI 2.0 HDBaseT3.0 matrix switcher with four receivers! The matrix is a four-input by four-output HDBaseT and HDMI matrix with HDCP 2.2 and up to 4K/UHD@60Hz video support. It transmits 4K/1080P video to distances up to 100m over a single CAT6A U/FTP Ethernet cable. The four HDBaseT outputs support 24V Power over Cable (PoC) feature, allowing the receivers to draw their power from the matrix over the HDBaseT cable.

The matrix switcher features comprehensive EDID management and advanced HDCP handling to ensure maximum functionality with a wide range of video sources.

The matrix switcher not only supports bi-directional IR, RS232, & Gigabit ethernet extension, but also has IR, RS232, and TCP/IP control options.

1.1 Features

- 4x4 HDBaseT matrix switcher with audio matrix.
- Fully compliant with the HDMI 2.0 and HDCP 2.2.
- Supports HDMI resolution up to 4K@60Hz 4:4:4, HDR10.
- Features four HDBaseT outputs, and the four outputs support 4K to 1080p down-scaling.
- The four HDBaseT outputs support 24V PoC, allowing the receivers to draw their power from the matrix switcher over the HDBaseT cable.
- Transmits 4K/1080P signal to the distance up to 100m over a single CAT6A U/FTP Ethernet cable.
- Supports audio matrix. Provides four digital SPDIF audio outputs and four analog L+R audio outputs for HDMI input audio de-embedding and HDBaseT output audio de-embedding. Moreover, the four digital SPDIF audio outputs supports ARC audio output from receivers.
- Volume adjustment for analog L+R audio outputs.
- Supports comprehensive EDID management and advanced HDCP handling.
- Controllable via front panel buttons, RS232 local and pass-through, IR local and pass-through, CEC, and TCP/IP (built-in GUI).

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

1.2 Package List

HDBaseT Matrix Switcher	<ul style="list-style-type: none">• 1x DL-44E-H3 4x4 HDMI 2.0 HDBaseT matrix switcher• 2x Mounting Ears with 8 Screws• 4x Plastic Cushions• 4x IR Emitter• 5x IR Receiver• 1x IR Remote• 1x RS232 Cable (3-pin to DB9)• 4x 3-pin Terminal Blocks• 1x Power Cable
HDBaseT Receiver	<ul style="list-style-type: none">• 4x HDBaseT Receivers• 8x Mounting Ears with 8 Screws• 16x Plastic Cushions• 4x 3-pin Terminal Blocks
	<ul style="list-style-type: none">• 1x User Manual

Note: Please contact Liberty immediately if any damage or defect in the components is found.

2. Specification

2.1 Matrix Switcher

Video Input	
Input	(4) HDMI
Input Connector	(4) Type-A female HDMI
HDMI Input Resolution	Up to 4Kx2K@60Hz 4:4:4, HDR10,1080p 3D
Video Output	
Output	(4) HDBaseT 3.0
Output Connector	(4) RJ45,
HDBaseT Output Resolution	Up to 4Kx2K@60Hz 4:4:4
HDMI Audio Signal	LPCM 7.1 audio, Dolby Atmos®, Dolby® TrueHD, Dolby Digital® Plus, DTS:X™, and DTS-HD® Master Audio™ pass-through.
Audio Output	
Output	(4) Stereo analog L+R audio, (4) Digital SPDIF audio
Output Connector	(4) RCA, (4) Toslink connectors
Analog L+R Audio Format	Supports PCM
Digital SPDIF Audio Format	Supports PCM, Dolby Digital, DTS, DTS-HD
Local Audio Sampling Rate	Supports 44.1KHz, 48KHz, 96KHz
ARC Audio Sampling Rate	Supports 48KHz, 96KHz
Frequency Response	20Hz – 20KHz, ±1dB
Audio Output Impedance	600 Ohms
Max Input Level	L+R: 2.0Vrms ± 0.5dB. 2V = 16dB headroom above -10dBV (316mV) nominal consumer line level signal. SPDIF: ± 0.05dBFS.
THD+N	< 0.05% (-80dB), 20Hz – 20KHz bandwidth, 1KHz sine at 0dBFS level (or max level).
SNR	L+R: > 80dB, 20Hz - 20KHz bandwidth. SPDIF: > 110dB, 20Hz-20 kHz bandwidth.
Crosstalk Isolation	SPDIF: < -130 dB, 10KHz sine at 0dBFS level (or max level before clipping). L+R: < -80 dB, 10KHz sine at 0dBFS level (or max level before clipping).
L-R Level Deviation	L+R: < 0.3dB, 1KHz sine at 0dBFS level (or max level before clipping).
Stereo Channel Separation	>70dB@1KHz.
Noise Level	L+R: <-80dBu; SPDIF: <-120dBFS
Control Part	

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Control port	(4) IR IN, (1) IR ALL IN, (4) IR OUT, (1) IR ALL OUT, (1) IR EYE, (5) RS232, (1) FIRWARE, (1) TCP/IP, (1) Ethernet
Control Connector	(11) 3.5mm jacks, (5) 3-pin terminal blocks, (1) Type-A USB, (2) RJ45
General	
Transmission Mode	HDBaseT
Transmission Distance	4K@60Hz /1080p ≤ 312 feet (95 meters)
Bandwidth	18Gbps
Operation Temperature	-5°C ~ +55°C
Storage Temperature	-25°C ~ +70°C
Relative Humidity	10% ~ 90%
External Power Supply	100V~240V AC, 50/60Hz
Power Consumption	90W(MAX)
Dimension (W*H*D)	436.4mm x 44mm x 401.5mm
Net Weight	5kg

2.2 HDBaseT Receiver

Video	
Input	(1) HDBT
Input Connector	(1) RJ45
Input Resolution	Up to 4Kx2K@60Hz 4:4:4
Output	(1) HDMI
Output Connector	(1) Type-A female HDMI
Output Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit, HDR10
Audio	
Input	(1) ARC/eARC Audio In
Input Connector	(1) Toslink Connector
Output	(2) Audio Breakout
Output Connector	(1) Toslink connector (1)3.5mm
Audio Format	Supports PCM, Dolby Digital, Dolby True-HD, DTS and DTS-HD.
Frequency Response	20Hz – 20KHz, ±1dB
Max Output Level	2.0Vrms ± 0.5dB. 2V = 16dB headroom above -10dBV (316mV) nominal consumer line level signal
THD+N	< 0.05% (-80dB), 20Hz – 20KHz bandwidth, 1KHz sine at 0dBFS level (or max level)
SNR	> 90dB, 20Hz-20 kHz bandwidth

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Crosstalk Isolation	> 70dB, 10KHz sine at 0dBFS level (or max level before clipping)
L-R Level Deviation	< 0.3dB, 1KHz sine at 0dBFS level (or max level before clipping)
Frequency Response Deviation	< ± 0.5dB 20Hz - 20KHz
Output Load Capability	1KΩ and higher (Supports 10x paralleled 10KΩ loads)
Stereo Channel Separation	>70dB@1KHz
Control	
Control Part	(1) eARC Mode DIP, (1) IR In, (1) IR Out, (1) RS232,(1)Ethernet
Control Connector	(1) DIP Switch, (2) 3.5mm jacks, (1) 3-pin terminal block,(1)RJ45
General	
Bandwidth	18Gbps
HDMI Standard	2.0
HDCP Version	2.2, 1.4 compliant
CEC	Control
PoC	PoC powered
HDMI 2.0 Cable Length	4K@60Hz 4:4:4 ≤ 5m, 4K@60Hz 4:2:0 ≤ 10m, 1080p ≤ 15m
Transmission Standard	HDBaseT
Transmission Distance	4K@60Hz/1080P ≤ 328 feet (100 meters)
Operation Temperature	-5°C ~ +55°C
Storage Temperature	-25°C ~ +70°C
Relative Humidity	10%-90%
Power Supply	24V DC 1.25A
Dimension (W*H*D)	160mm x 21.7mm x 100mm
Net Weight	370g

COO

Taiwan


3. Panel Description

3.1 Matrix Switcher Front Panel



- ① **LCD Screen:** Presents real-time operation status.
- ② **Power LED:** Illuminates RED when the device is in standby mode, illuminates GREEN when device is powered on.
- ③ **IR Sensor and its LED:** Illuminates RED when the IR sensor receives an IR signal from the IR remote to control the matrix switcher. The IR sensor is on the right side of the LED.
- ④ **INPUT:** Four buttons for input source selection.
- ⑤ **OUTPUT:** Four buttons for output channel selection.
- ⑥ **Menu Buttons:**
 - LOCK: Lock or unlock the front panel buttons.
 - PRESET: Preset setting.
 - MENU/↵: Menu or confirm button.
 - BACK: Go back to the previous operation.
 - UP: Page up.
 - DOWN: Page down.

3.2 Matrix Switcher Rear Panel

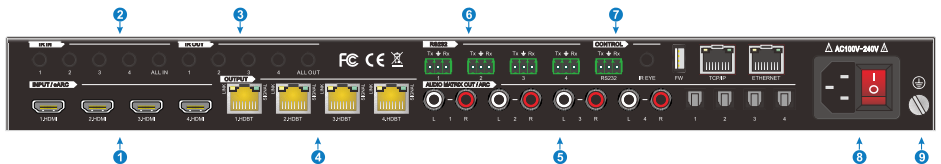


- ① **INPUT:** Four type-A female HDMI input ports to connect HDMI sources.
- ② **IR IN:**
 - 1~4: Four 3.5mm jacks to connect four IR receivers. Each IR input is associated with the respective HDBaseT output and cannot be switched separately. It makes up a bi-directional IR transmission with the IR OUT on the corresponding HDBaseT receiver.

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

- ALL IN: 3.5mm jack to connect the IR receiver to transmit the IR signal from the ALL IN port to all HDBaseT receivers.
- ③ **IR OUT:**
- 1~4: Four 3.5mm jacks to connect four IR emitters to send the IR signal received from the corresponding HDBaseT receivers.
 - ALL OUT: 3.5mm jack to connect the IR emitter to send the IR signal received from all HDBaseT receivers.
- ④ **OUTPUT:** Four HDBaseT RJ45 outputs to connect the four HDBaseT receivers.
- ⑤ **AUDIO MATRIX OUT/ARC:** Four RCA and four Toslink connectors to connect speakers or amplifiers for HDMI input audio de-embedding or HDBaseT output audio de-embedding, and the four Toslink connectors can also be used for ARC audio output from HDBaseT receivers. They can make up an audio matrix to be set by front panel buttons, GUI or RS232 commands.
- ⑥ **RS232:** Four 3-pin terminal blocks to control the third-party devices base on RS232 pass-through feature. There is a one-to-one correspondence between the four RS232 ports and the four RS232 ports of four HDBaseT receivers.
- ⑦ **CONTROL:**
- RS232: 3-pin terminal block to connect the control device (e.g. PC) to control the matrix switcher by RS232 commands.
 - IR EYE: 3.5mm jack to connect IR receiver to control the matrix switcher by the IR remote.
 - FW: Type-A USB port for firmware upgrade.
 - TCP/IP: RJ45 port to connect the control device (e.g. PC) to control the matrix switcher by GUI.
 - Ethernet: RJ45 port to connect the network.
- ⑧ **AC100V~240V:** Power port to connect an AC 100V~240V power by the power cord.
- ⑨ **GROUND:** Connect to earth to ensure the unit is well grounded.

3.3 Receiver Front and Rear Panel



① LED:

Power LED: The LED illuminates red when power is applied.

OUT LED: The LED illuminates blue when HDMI out is connected to a display.

② DIP SWITCH:

HDMI: The ARC/eARC input via HDMI output port of receiver.

PASS: Supports ARC/eARC pass-through.

SPDIF: The ARC/eARC input via SPDIF input port of receiver.

③ SPDIF In: Toslink connector to connect ARC/eARC audio source device (e.g.TV).

④ AUDIO:

SPDIF OUT: Receive digital audio source from Matrix

AUDIO OUT: Receive analog audio source from Matrix

⑤ FW: Micro-USB port for firmware upgrade.

⑥ ETHERNET: RJ45 port to connect the pc.

⑦ HDBT IN: RJ45 port to connect the HDBT output port of Matrix by CAT6A cable.

⑧ HDMI OUT: Connect to display.

⑨ IR:

IR In: 3.5mm jack to connect the IR receiver for IR pass-through.

IR Out: 3.5mm jack to connect the IR emitter for IR pass-through.

⑩ RS232: 3-pin terminal block to connect the RS232 control device (e.g. PC) or a third-party device to be controlled.

⑪ DC 24V: DC connector for the power adapter connection.


4. System Connection

4.1 Usage Precaution

- Make sure all components and accessories included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on.

4.2 System Diagram

The following diagram illustrates typical input and output connections that can be utilized with this matrix switcher:

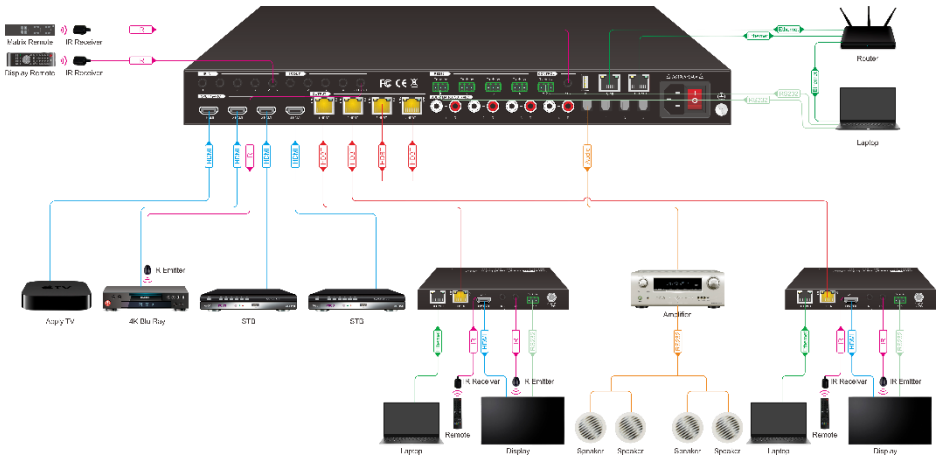

5. Button Control


The matrix switcher can be controlled by using the buttons on the front panel. Whenever a command is accepted, the indicators of all the buttons pressed will blink three times then they will go off. If the command fails, the indicators will go off immediately without blinking.

5.1 Signal Switching

- **Switch an input to an output**

Operation: INPUT# + OUTPUT# + MENU/↵

Example: Switch Input 1 to Output 2:

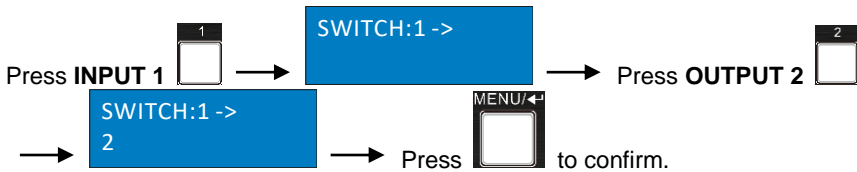


Note: In default status, 4 IR OUT ports correspond with 4 HDMI INPUTS. When you switch an HDMI input, the corresponding IR OUT will be switched synchronously.



- **Switch an input to several outputs**


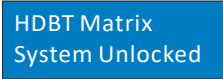
Operation: INPUT# + OUTPUT# + OUTPUT# + ... + MENU/↵

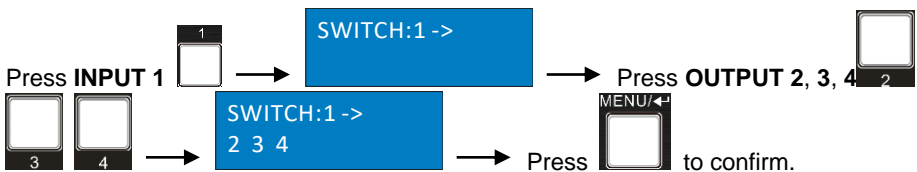Example: Switch Input 1 to Output 2, 3, and 4.











5.2 Panel Button Locking/Unlocking

Press and hold  at least three seconds. →  →

Press and hold  to unlock. → 

5.3 Status Information Inquiry


Press  →  → Press  enter status information tab. → Press  or  navigation buttons to check the previous or next item respectively.

LCD Screen	Description
	Report the signal switching status.
	Report the connection status of all HDMI input ports. Y means the corresponding input port is connected to a source device, N means there is no connection between the input port and source device.
 1~4=HDBaseT output 1~4.	Report the connection status of all HDBT output ports. Y means the corresponding output port is connected to an HDBaseT receiver, N means there is no connection between the output port and HDBaseT receiver.

5.4 EDID Management

The Extended Display Identification Data (EDID) is used by the source device to match its video resolution with the connected display. By default, the four source devices invoke the fifth built-in EDID: 4K@60Hz HDR 2CH.


- **Enter EDID management tab:**

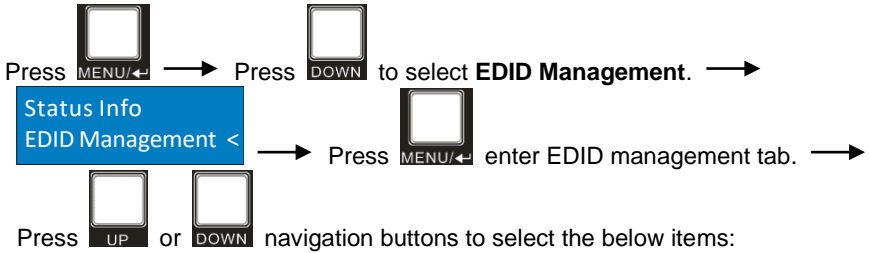

- ✓ Learn HDBT OUT
- ✓ Built-in EDID

- **To copy the EDID data from one HDBT output to one or several inputs:**

Example: Input 1, 2, 3 and 4 learn the EDID data of HDBT output 2.

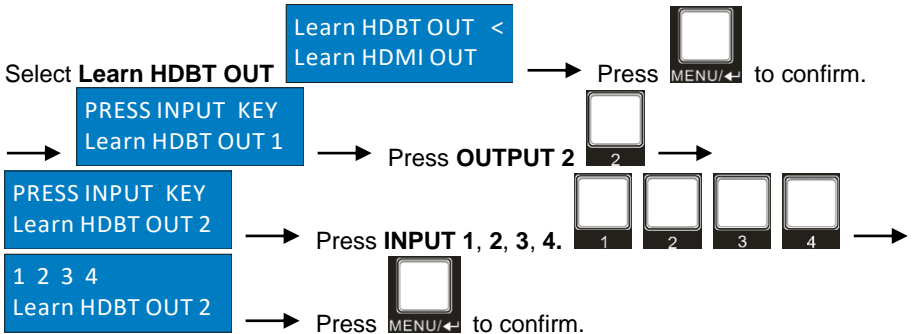


Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

- **To invoke the built-in EDID data:**

There are six types of built-in EDID data can be invoked, as shown as below:

No.	EDID	
	Video	Audio
1	1080p	2CH
2	1080p	MultiCH
3	4K@30Hz HDR	2CH
4	4K@30Hz HDR	MultiCH
5 (Default)	4K@60Hz HDR	2CH
6	4K@60Hz HDR	MultiCH
User Custom		

Example: Input 1 and 2 invoke the built-in EDID data: 4K@30Hz HDR 2CH.

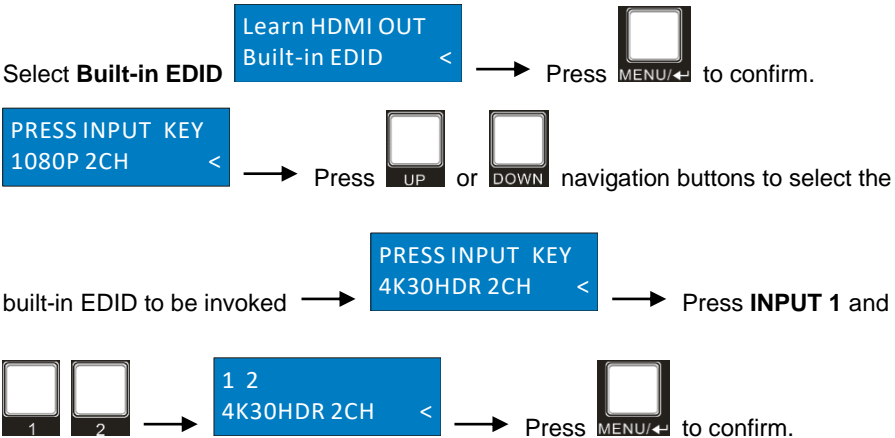

5.5 Audio Setting

The matrix switcher provides four analog L+R audio output ports and four digital SPDIF output ports for audio de-embedding. The audio source selection of these eight audio output ports, and the L+R audio volume can be controlled by the front panel buttons.

- **Audio Source Selection**


There are eight audio sources can be selected for any analog L+R audio output port, and twelve audio sources can be selected for any SPDIF audio output port.

Audio Output Ports	Audio Sources		
	Input Breakout	Output Breakout	ARC/eARC

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0


L+R OUT 1	In1 Breakout	Out1 Breakout	Out1 ARC
L+R OUT 2	In2 Breakout	Out2 Breakout	Out2 ARC
L+R OUT 3	In3 Breakout	Out3 Breakout	Out3 ARC
L+R OUT 4	In4 Breakout	Out4 Breakout	Out4 ARC
SPDIF OUT 1	In1 Breakout	Out1 Breakout	Out1 ARC
SPDIF OUT 2	In2 Breakout	Out2 Breakout	Out2 ARC
SPDIF OUT 3	In3 Breakout	Out3 Breakout	Out3 ARC
SPDIF OUT 4	In4 Breakout	Out4 Breakout	Out4 ARC

Example: Select the HDMI input 2 audio source for the analog L+R output 2.

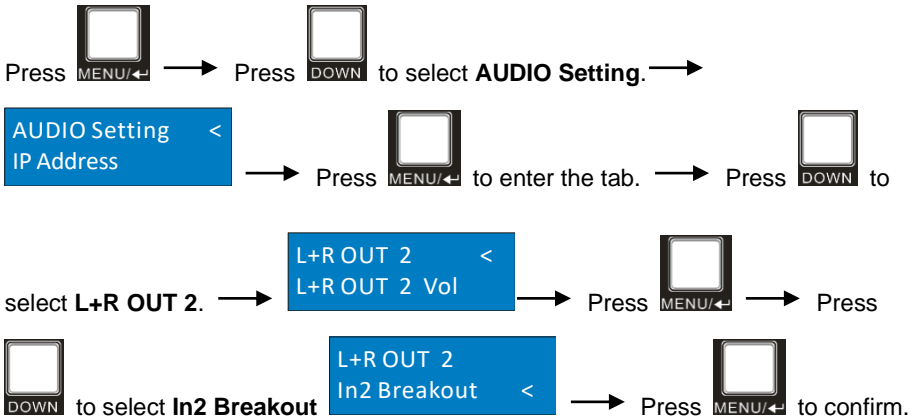

• L+R Output Audio Volume Control

Example: Set the audio volume of L+R OUT 2 port.

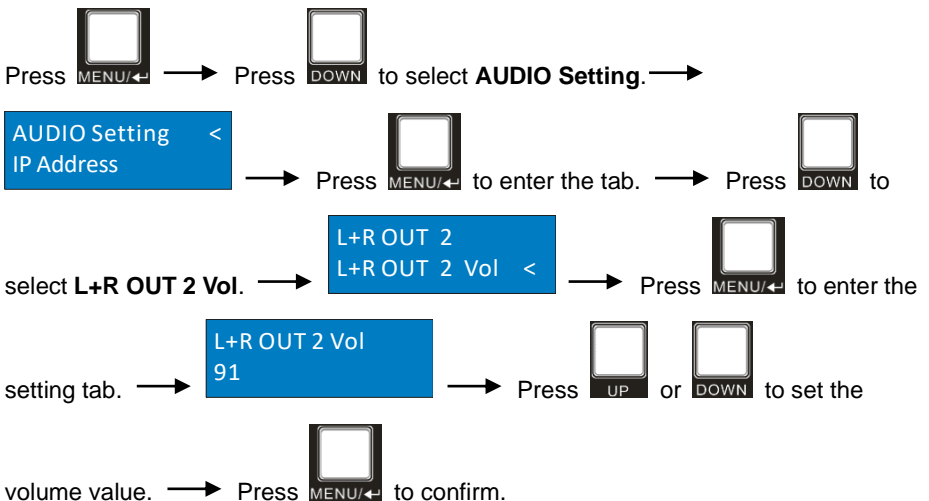


5.6 Preset Setting

Press **PRESET** button can save the current switching routing or load the saved layout preset.

Note: The matrix switcher supports nine presets, but only preset 1~4 can be saved and recalled by button control. Please manage other preset by GUI control or RS232 control.


- **Save the current switching routing to a preset**

Example: Save the current switching routing to preset 2.

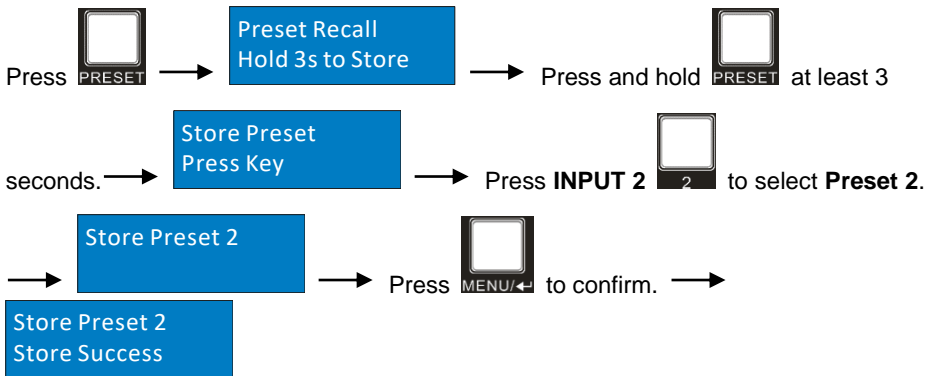


- **Recall a saved preset**

Example: Recall the saved preset 2.

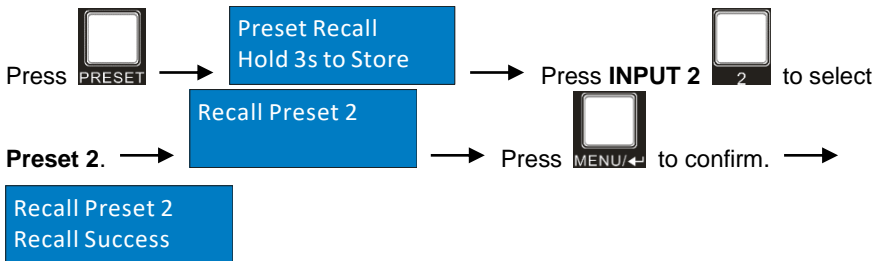

5.7 IP Address Inquiry

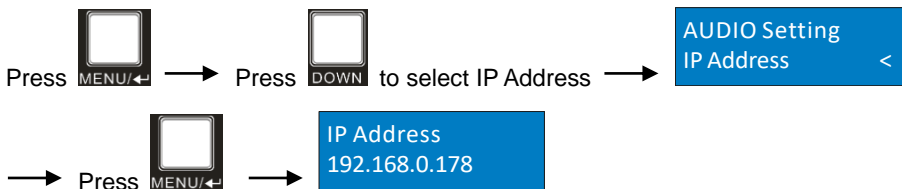

6. GUI Control


The switcher can also be controlled via TCP/IP. The default IP settings are:

IP Address: 192.168.0.178

Subnet Mask: 255.255.255.0

Serial port: 4001

Type **192.168.0.178** in the internet browser, it will enter the below log-in webpage:




Username: admin

Password: admin

Type the user name and password, and then click **Login** to enter the section for video switching.


6.1 Signal Switching

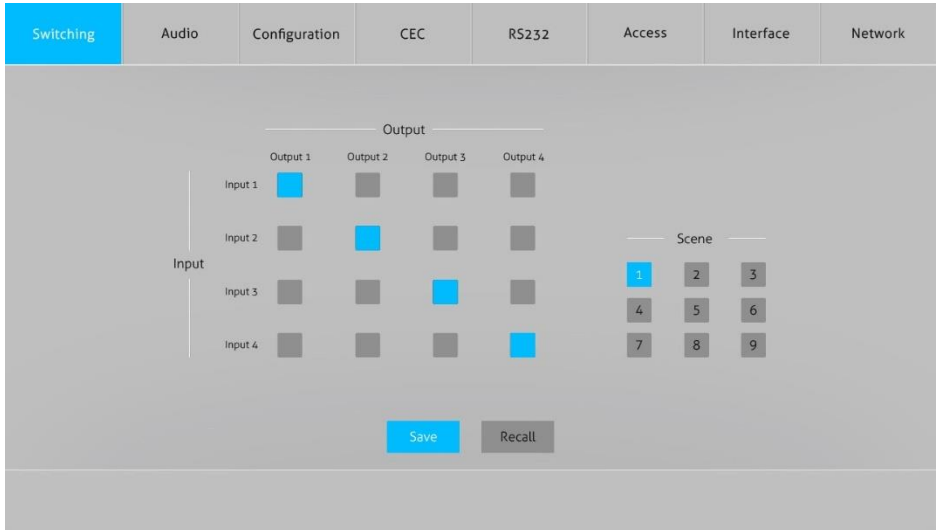

Use the 4x4 button grid on the page to set which inputs are directed to which outputs. For example, clicking the button on the Input 1 row and Output 2 column, directs input 1 to output 2.


Use the 9 numbered buttons under scene area to save and load layout presets.

- To save a given layout, first click one of the numbered buttons, then click the **Save** button.
- To load a previously saved layout, first click one of the numbered buttons, then click the **Recall** button.

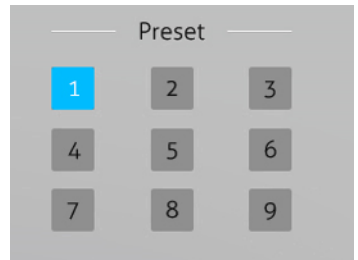


6.2 Audio Setting

- **HDMI ARC**

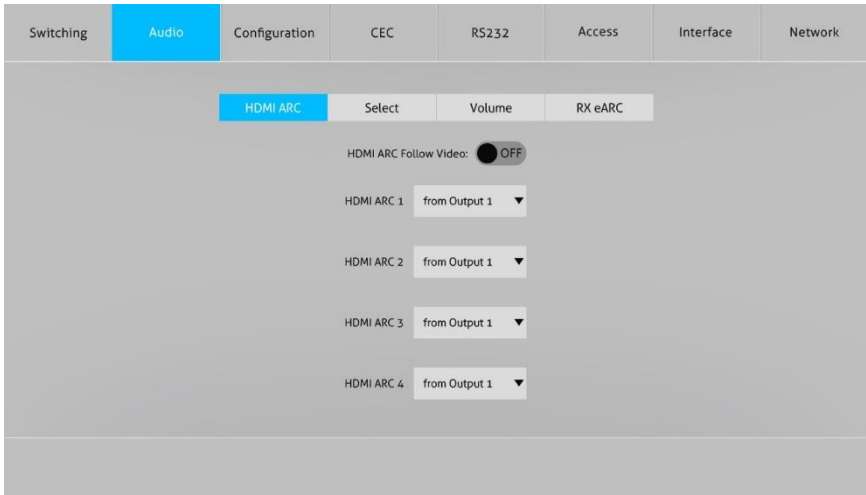

Turn ON/OFF the HDMI ARC Follow video, if turn on, When the video source is switched, ARC will also follow the switch.

- **Audio Source Selection**

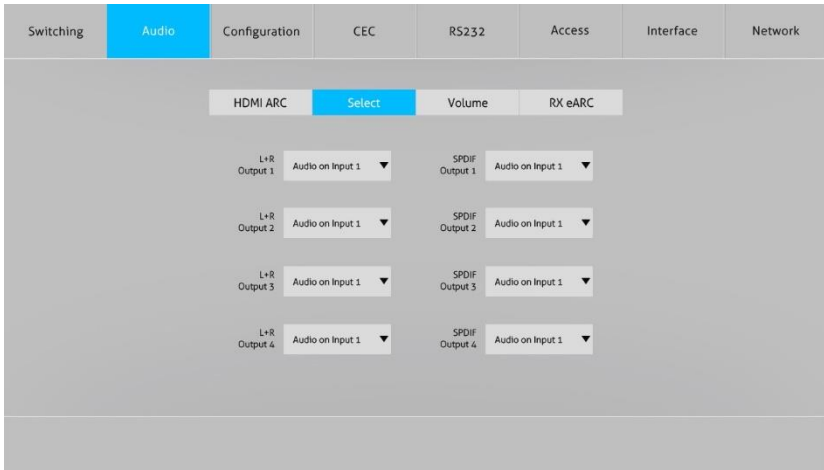

- There are 12 audio sources can be selected for four analog L+R audio output ports, and 12 audio sources can be selected for four digital SPDIF output ports.


Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

- **Volume**



Adjust L+R output audio volume by the volume bar and the three buttons on the right side.


- **RX eARC**

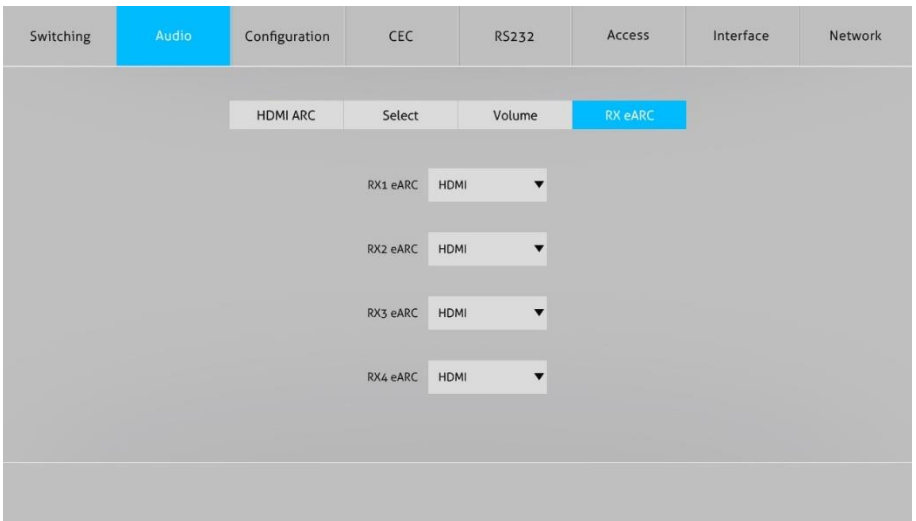

Choose HDMI or SPDIF ARC/eARC

6.3 Configuration

6.3.1 Down-scaling

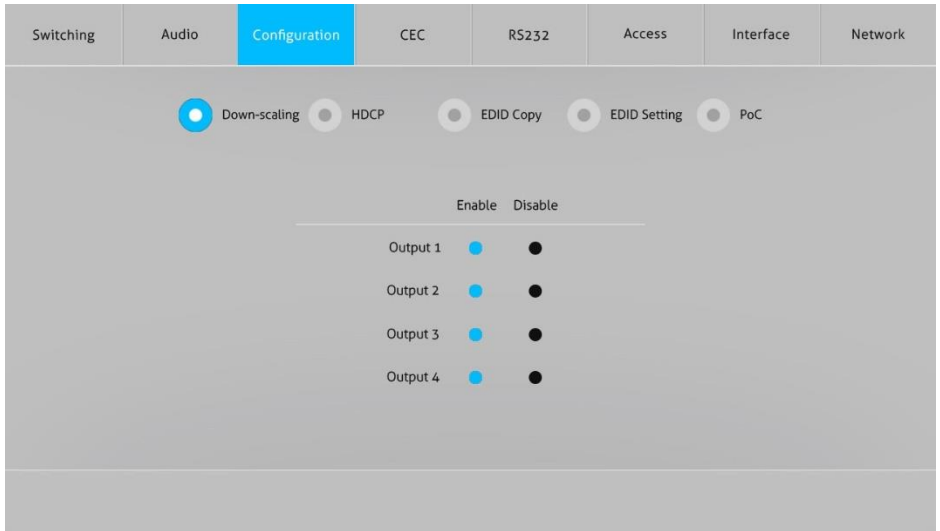

- Enable/disable video resolution down-scaling function of output 1~4 ports.

When enable down-scaling, the 4K input can be automatically degraded to 1080p output for compatibility with 1080p display which is connected to the HDMI output port.

6.3.2 HDCP Setting



- Set the HDCP mode of HDMI and HDBaseT outputs to **Passive** or **Active**.

Mode	Description
Follow Display	Automatically follows the Display.
Passive	Automatically follows the HDCP version of source device.
Active (Default)	<ul style="list-style-type: none"> ● If the input video has HDCP content, the HDCP version of HDMI output is HDCP 1.4 for a greater display compatibility. ● If the input video has no HDCP content, the HDMI output has no HDCP.

6.3.3 EDID Copy



- Copy the EDID data from a single output port to one or several input ports.

Click **Confirm** to save any changes or click **Cancel** to cancel any changes that have been made.

6.3.4 EDID Setting

Click **EDID Setting** to enter the below section to set a predefined EDID for input ports.


The screenshot shows a web-based configuration interface for an HDMI matrix. At the top, there are several tabs: Switching, Audio, Configuration (highlighted in blue), CEC, RS232, Access, Interface, and Network. Below the tabs, there are five radio button options: Down-scaling, HDCP, EDID Copy, EDID Setting (selected with a blue dot), and PoC. A dashed horizontal line separates the top options from the input port settings. Below the line, there are four tabs for input ports: Input 1 (highlighted in blue), Input 2, Input 3, and Input 4. Under the Input 1 tab, there are six radio button options: 1080p 2CH (selected with a blue dot), 1080p MultiCH, 4K30 HDR 2CH, 4K60 HDR MultiCH, 4K60 HDR 2CH, and 4K60 HDR MultiCH. Below these options is a 'User-defined' radio button, a text input field containing '.bin', and an 'Apply' button. At the bottom of the configuration area, there are two buttons: 'Confirm' (highlighted in blue) and 'Cancel'.

- Select a built-in EDID for one or several input ports.

Operation:

- 1) Select one input ports.
 - 2) Select a built-in EDID.
 - 3) Click **Confirm** to save setting.
-
- Upload user-defined EDID by the below steps:
 - 1) Prepare the EDID file (.bin) on the control PC.
 - 2) Select the **User-defined**.
 - 3) Click the box , and then select the EDID file (.bin) according the tooltip.
 - 4) Click **Apply** to upload the user-defined EDID, and then click **Confirm** to save setting.

6.3.5 PoC

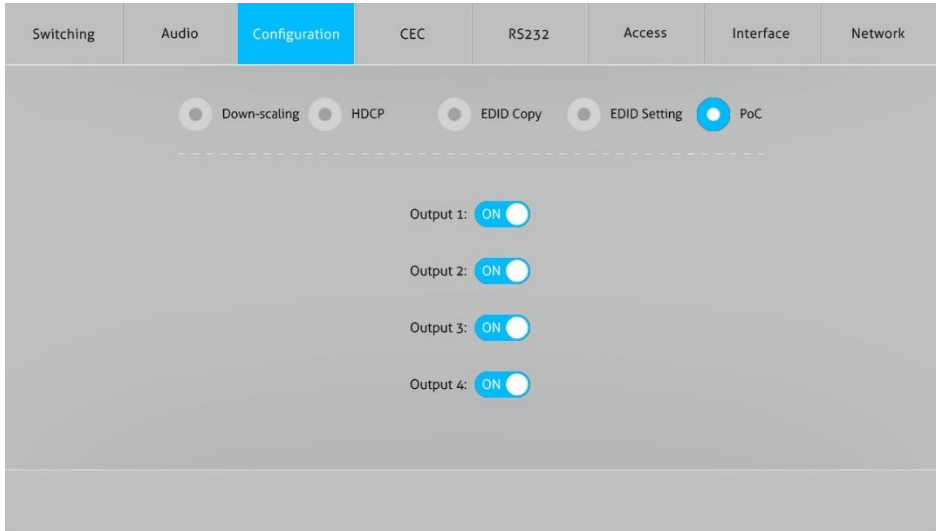

Turn ON/OFF the PoC

6.4 CEC Control


If the input source devices and HDBaseT output devices support CEC, they can be controlled via the following CEC interface.

1) Input Source Device Control



- Select one or several HDMI input source devices to be controlled, and then press function buttons.

2) HDBT Output Device Control

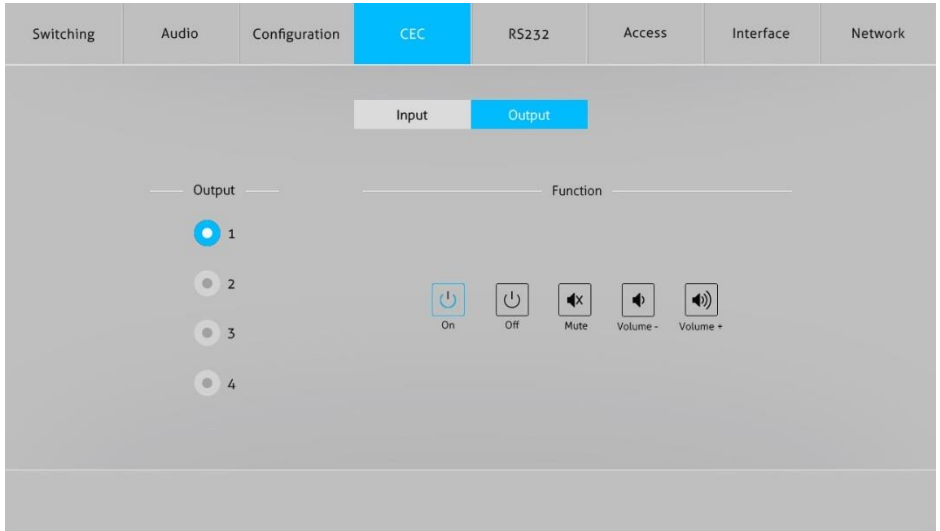

- Select one or several HDBaseT output devices to be controlled, and then press function buttons.

6.5 RS232 Control

Switching Audio Configuration CEC **RS232** Access Interface Network

Port
 HDBT 1 HDBT 2 HDBT 3 HDBT 4

Baud Rate
 2400 4800 9600 19200
 38400 57600 115200

Command
 Hex

Send

- Send RS232 commands to control third-party devices which are connected to the far-end HDBaseT receivers.

Operation:

- 1) Select the HDBaseT port which is connected to HDBaseT receiver which must have third-party device attached.
- 2) Set the baud rate.
- 3) Typing the commands in the box to control the selected remote third-party device which is connected to HDBaseT receiver. If click the **Hex**, the RS232 commands can be typed with hexadecimal value.
- 4) Click **Send** to transmit RS232 command to the selected HDBaseT port.

6.6 Access Setting

Switching	Audio	Configuration	CEC	RS232	Access	Interface	Network
Credentials							
Password:		<input type="text" value="admin"/>	<input type="button" value="Confirm"/>				
Firmware Upgrade							
		<input type="text" value="C:\"/>	<input type="button" value="Confirm"/>				
Front Panel Lock							
ON		<input checked="" type="checkbox"/>	OFF				

- Reset the login admin.
- Lock or unlock the front panel buttons.
- Get the GUI and firmware version.

Click **Confirm** to save any changes or click **Cancel** to cancel any changes that have been made.

6.7 Interface Setting

The screenshot shows a configuration menu with several tabs: Switching, Audio, Configuration, CEC, RS232, Access, Interface (highlighted in blue), and Network. The 'Interface' tab is active, displaying the following settings:

- LCD Readout: HDBaseT Matrix
- Model Name: [Empty text field]
- Button Labels:
 - Input
 - 1: Input 1
 - 2: Input 2
 - 3: Input 3
 - 4: Input 4
 - Output
 - 1: Output 1
 - 2: Output 2
 - 3: Output 3
 - 4: Output 4

At the bottom of the settings area, there are two buttons: a blue 'Confirm' button and a grey 'Cancel' button.

- Modify LCD readout and button labels.

Click **Confirm** to save any changes or click **Cancel** to cancel any changes that have been made.

6.8 Network Setting

Switching	Audio	Configuration	CEC	RS232	Access	Interface	Network
-----------	-------	---------------	-----	-------	--------	-----------	---------

MAC Address: 44-33-4C-C9-35-12

DHCP Static IP

IP Address:

Subnet Mask:

Gateway:

- Static IP or Dynamic Host Configuration Protocol (DHCP).
- Modify the static IP Address, Subnet Mask, and Gateway.

6.9 GUI Upgrade

Please visit at <http://192.168.0.178:100> for GUI online upgrade.

Type the username and password (the same as the GUI log-in setting, modified password will be available only after rebooting) to login the configuration interface. After that, click **Administration** in the source menu to get to **Upload Firmware** as shown below:

The screenshot shows the 'WEB SERVER' interface. On the left is a navigation tree with 'Administration' expanded and 'Upload Firmware' circled in red. The main content area is titled 'Upgrade Firmware' and contains a warning: 'Upgrade the MediaTek SoC firmware to obtain new functionality. It takes about 1 minute to upload & upgrade flash and be patient please. Caution! A corrupted image will hang up the system.' Below this is a form titled 'Update Firmware' with a 'Location:' field, a 'Choose File' button, and an 'Apply' button.


Select the update file and click **Apply** button, and then it will start upgrade process.

7. IR Control

7.1 IR Remote Control

The matrix switcher has a built-in IR sensor on the front panel for receiving IR control signal from IR remote. In addition, it also provides IR EYE port on the rear panel to connect an external IR receiver for IR local control.

The matrix switcher can be controlled by the below IR Remote:

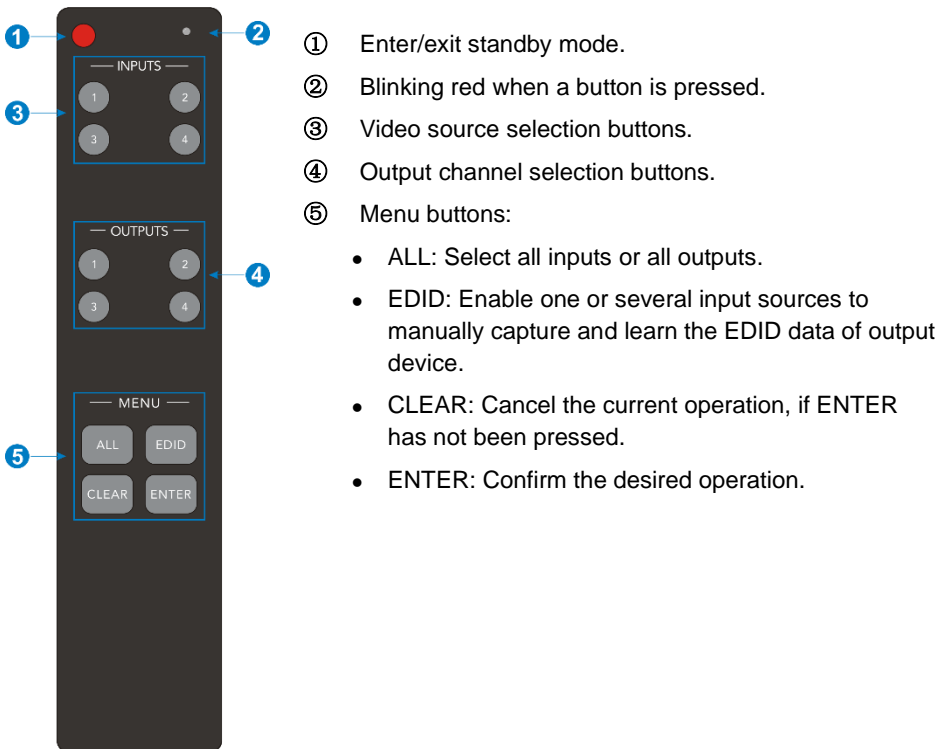

Note: The IR receivers which are connected to HDBaseT receivers also can receive the IR signal of the IR remote, so the matrix switcher also can be controlled by the IR remote at the far-end HDBaseT receivers' position. The IR remote-control mode can be enabled or disabled by sending RS232 command "IRRCM[XX]ON."/ "IRRCM[xx]OFF." ([XX]=00~04). Please refer to the [8.3.1 System Control](#) for more details.

7.2 IR Pass-through Control

The matrix switcher supports bi-directional IR pass-through, allowing the devices can be controlled by both source and destination ends. This section provides connection and switching examples to illustrate possible configurations.


7.2.1 Control Local Input Device from Remote

The same basic principle applies when controlling the local input device from the remote location.

- **Control local input device through IR OUT port**

Example: Switch HDMI input 3 to HDBaseT output 1.


Connect an IR receiver to **IR IN** port on the receiver, then connect an IR emitter to the **IR OUT 3** on the matrix switcher. The third input source can be controlled through its corresponding IR output port.

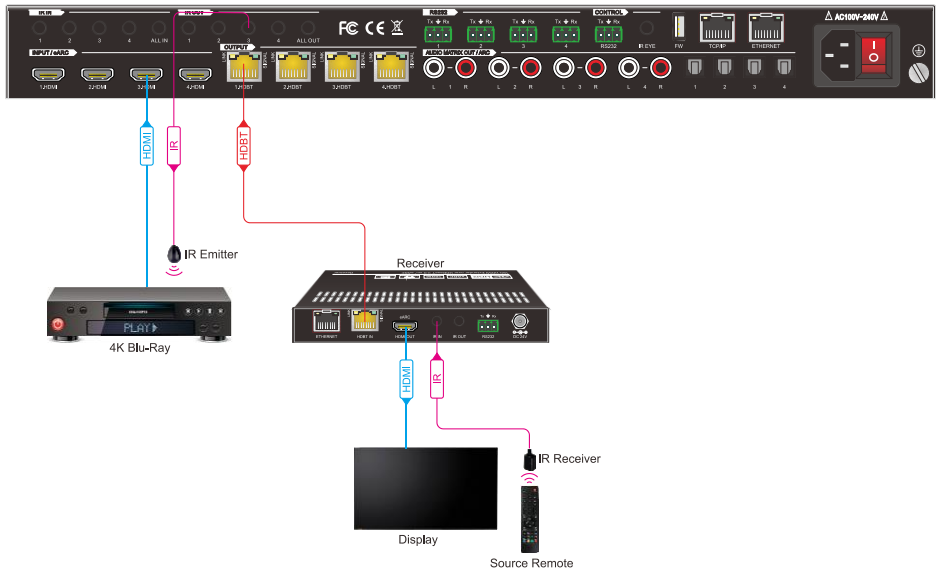

- **Control local input device through IR ALL OUT port**

The emitter can be connected to the **IR ALL OUT** port on matrix switcher to control all local input devices. In this case, the IR receiver must be connected to the **IR IN** port on each connected HDBaseT receiver

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT.0

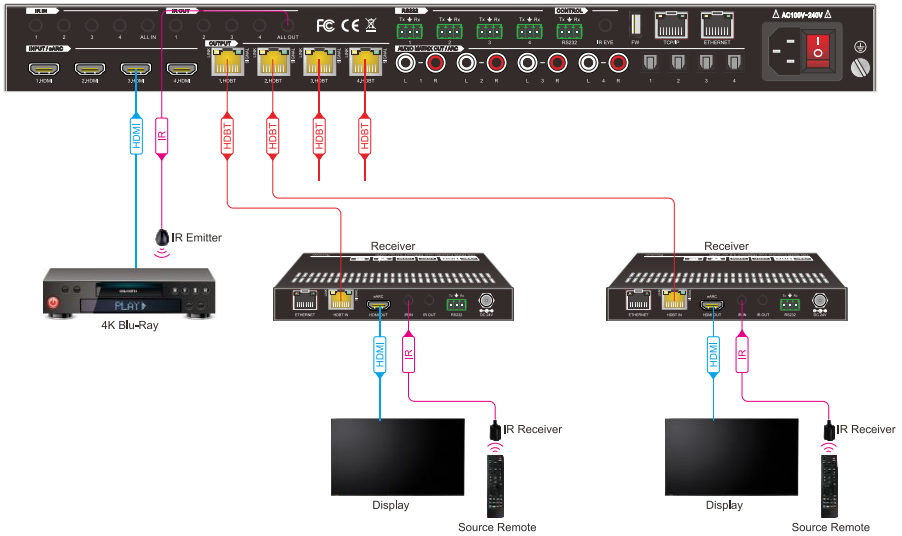


7.2.2 Control Remote Output Device from Local

The remote displays can be controlled from the local matrix switcher location.

- **Control remote device through IR IN port**

Example: Switch HDMI input 3 to HDBaseT output 1.


Connect an IR receiver to **IR IN 3** port on the matrix switcher, then connect an IR emitter to the **IR OUT** on the receiver

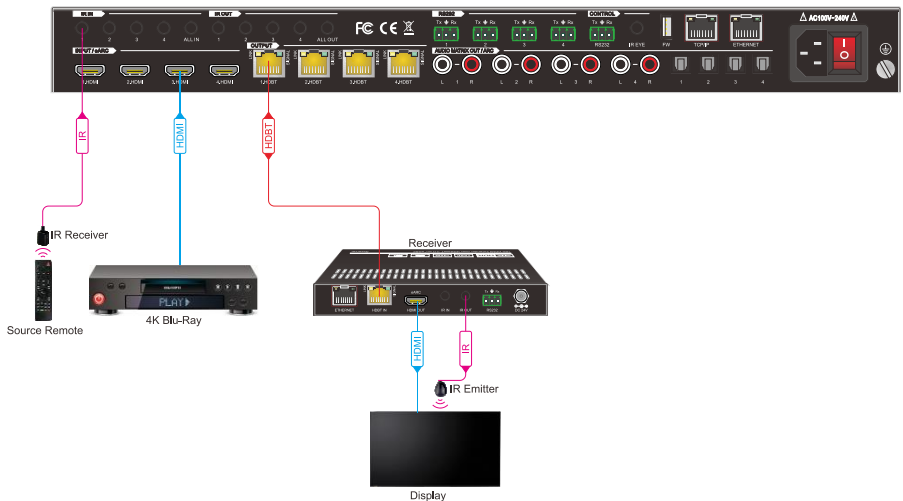

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT.0

- **Control remote device through IR ALL IN port**

The receiver can be connected to the **IR ALL IN** port on matrix switcher to control all remote output devices. In this case, the IR emitter must be connected to the **IR OUT** port on each connected HDBaseT receiver

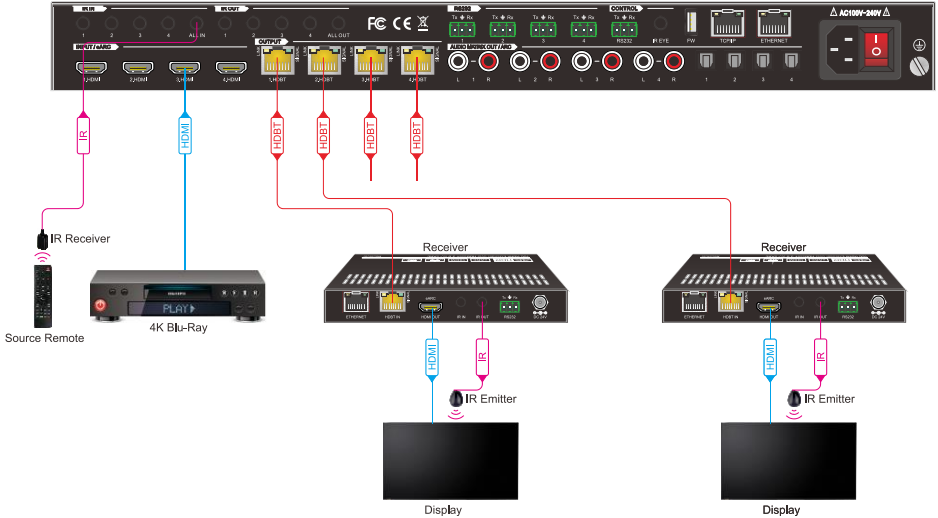


8. RS232 Control

8.1 RS232 Control Connection


8.1.1 Control the Matrix Switcher from Local

To control the matrix switcher from a local PC, the **3-pin to DB9 RS232 Cable** is used to connect between the matrix and PC.

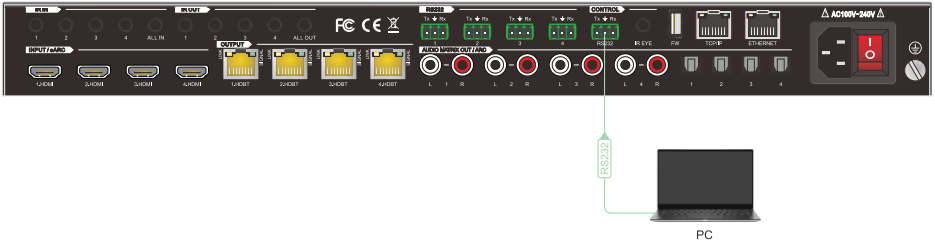

8.1.2 Control the Matrix Switcher from Remote

To control the matrix switcher from remote location, please connect one or more PCs to the **RS232** ports of HDBaseT receivers with the **3-pin to DB9 RS232 Cables**. The matrix switcher can be controlled by any one of PCs, the connection diagram is shown as below:

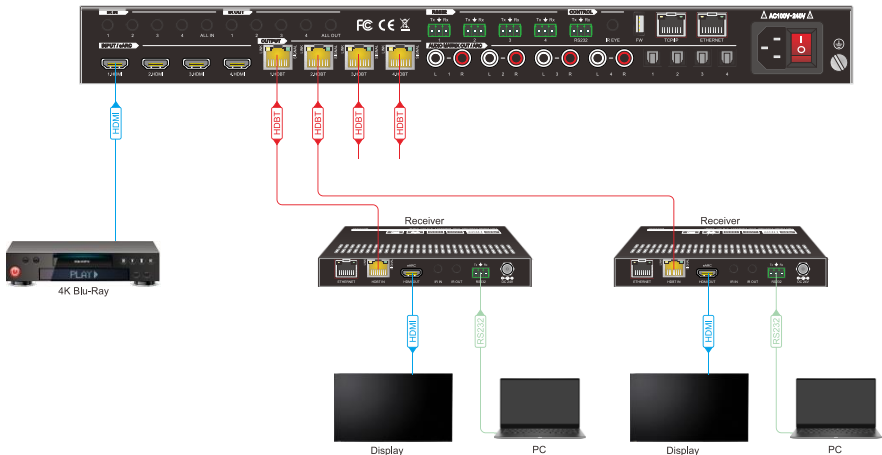


Note: The command **"RS232RCM[XX]ON."** ([XX]=00–04) needs to be sent to enable or disable this control mode. For example, send the command **"RS232RCM00ON."** to enable the remote-control mode for all HDBaseT outputs, and send the command **"RS232RCM00OFF."** to disable the remote-control mode for all HDBaseT outputs. Please refer to the 8.3.1 System Control for more details.

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT.3.0

8.1.3 Control the Remote Third-party Device from Local


To control a third-party device from local, first determine which HDBaseT receiver is connected to (1 in the diagram below). Next, connect a PC to the corresponding **RS232** port of matrix switcher with **3-pin to DB9 RS232 Cable**, then connect a third-party device (e.g. projector) to the **RS232** port of the determined HDBaseT receiver. The remote third-party device can be controlled by the local PC

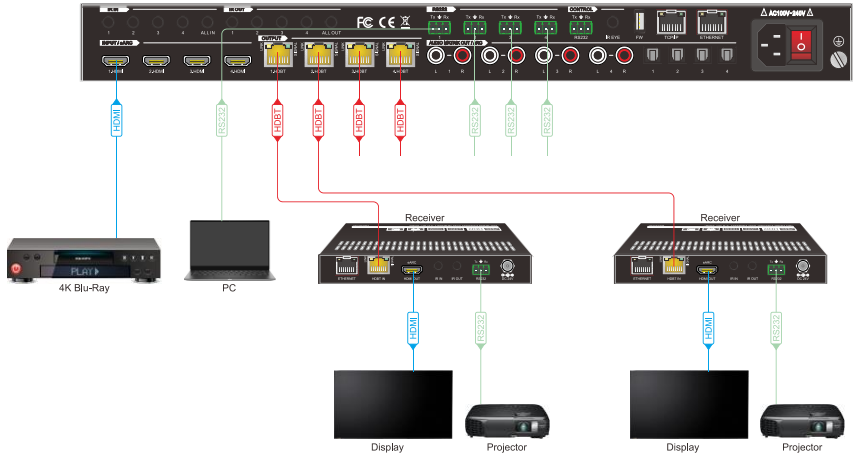

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT.0

8.1.4 Control the Local Third-party Device from Remote

To control a third-party device from remote, first determine which HDBaseT receiver is connected to (1 in the diagram below). Next, connect a PC to the **RS232** port of HDBaseT receiver with **3-pin to DB9 RS232 Cable**, then connect a third-party device (e.g. projector) to the **RS232** port of matrix switcher. The local third-party device can be controlled by the remote PC

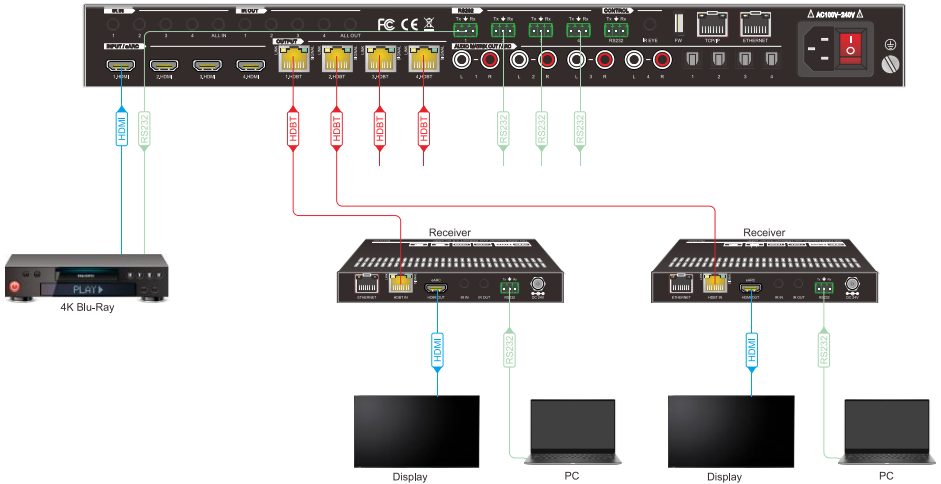


8.2 RS232 Control Software

If the matrix switcher and third-party devices needs to be controlled from PC by an RS232 connection, a RS232 control software should be installed in PC. Here using **CommWatch.exe** as an example. The icon is shown as below:



Double-click the icon to run, and its interface is depicted below:

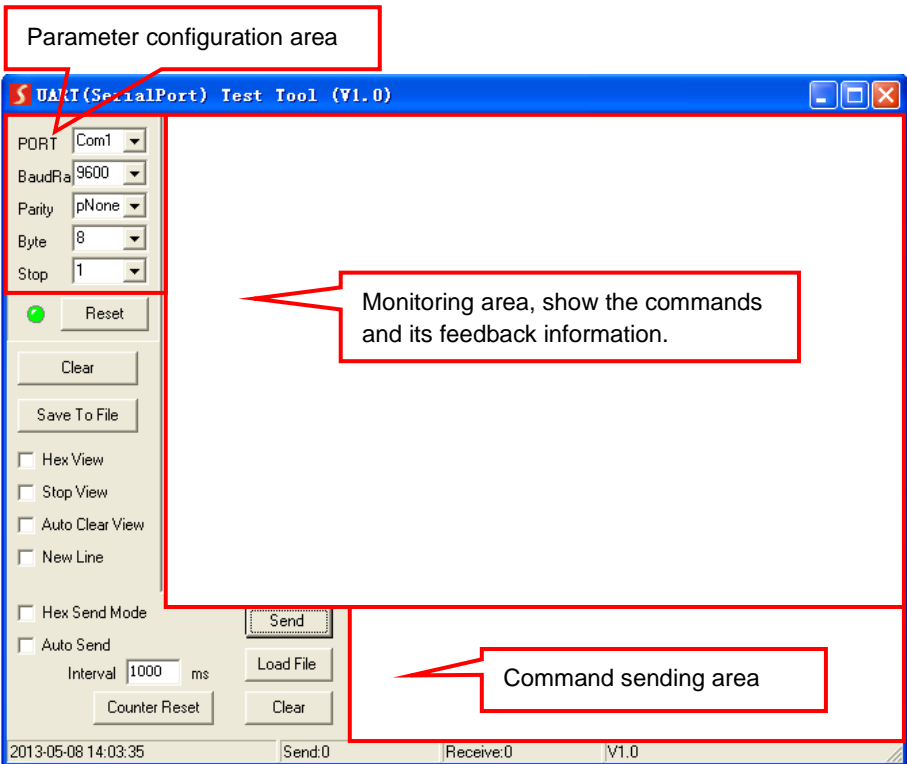

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then you are able to send command in command sending area.

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

8.3 RS232 Commands

When controlling the matrix, the serial port settings for all RS232 commands is:

Baud rate: 9600 Data bit: 8 Stop bit: 1 Parity bit: none

The matrix switcher can be controlled by sending the following RS232 commands:

8.3.1 System Setting

Command	Description	Command Example and Feedback
PowerON.	Power on the system.	Power ON!
PowerOFF.	Power off the system.	Power OFF!
/*Name.	Report product name.	MUH44T-H2
/*Type.	Report product model.	HDBaseT Matrix
/*Version.	Report software version.	V1.0.0 CPLD:V1.0.0 VideoDriverVersion:V1.0.0
RST.	Reset to factory default.	Factory Default!
Lock.	Lock front panel buttons.	Front Panel Locked!
Unlock.	Unlock front panel buttons.	Front Panel UnLock!
GetGuiIP.	Report the GUI IP.	GUI_IP:192.168.0.178!
SetGuiIP:xxx.xxx.xx x.xxx.	Set the GUI IP to xxx.xxx.xxx.xxx.	SetGuiIP:192.168.0.176. SetGuiIP:192.168.0.176!
Baudrate115200.	Set the serial baud rate of matrix switcher to 115200.	Set Local RS232 Baudrate Is 115200!
Baudrate57600.	Set the serial baud rate of matrix switcher to 57600.	Set Local RS232 Baudrate Is 57600!
Baudrate38400.	Set the serial baud rate of matrix switcher to 38400.	Set Local RS232 Baudrate Is 38400!
Baudrate19200.	Set the serial baud rate of matrix switcher to 19200	Set Local RS232 Baudrate Is 19200!
Baudrate9600.	Set the serial baud rate of matrix switcher to 9600.	Set Local RS232 Baudrate Is 9600!
Baudrate4800.	Set the serial baud rate of matrix switcher to 4800.	Set Local RS232 Baudrate Is 4800!
Baudrate2400.	Set the serial baud rate of matrix switcher to 2400.	Set Local RS232 Baudrate Is 2400!
PHDBTON.	Enable PoC of HDBT outputs for powering HDBaseT receivers.	HDBT Power ON!
PHDBTOFF.	Disable PoC of HDBT outputs.	HDBT Power OFF!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Feedback
STA_PHDBT.	Report the PoC status of HDBT outputs.	HDBT 01 Power ON! HDBT 02 Power ON! HDBT 03 Power ON! HDBT 04 Power ON!
DS[XX]ON.	Turn on DOWN SCALE for HDBT output. [xx] The value 00-04,00 means all HDBT outputs, 01 means output 1, 02 means output 2, 03 means output 3, 04 means output 4.	DS00ON. OUT 01 Down Scale ON! OUT 02 Down Scale ON! OUT 03 Down Scale ON! OUT 04 Down Scale ON!
DS[XX]OFF.	Turns off the DOWN SCALE of the HDBT output. [xx] The value 00-04,00 means all HDBT outputs, 01 means output 1, 02 means output 2, 03 means output 3, 04 means output 4.	DS00OFF. OUT 01 Down Scale OFF! OUT 02 Down Scale OFF! OUT 03 Down Scale OFF! OUT 04 Down Scale OFF!
STA_DS.	Report the down-scaling function of HDMI outputs.	HDMI OUT 01 Down Scale OFF! HDMI OUT 02 Down Scale OFF! HDMI OUT 03 Down Scale OFF! HDMI OUT 04 Down Scale OFF!
RS232RCM[XX]ON.	Enable the RS232 remote-control mode for HDBT output [XX] that the matrix switcher can be controlled from remote PC. [XX]=00-04. The "[XX]=00" represents all HDBT outputs.	RS232RCM00ON. RS232 Remote 01 Control MCU ON! RS232 Remote 02 Control MCU ON! RS232 Remote 03 Control MCU ON! RS232 Remote 04 Control MCU ON!
RS232RCM[XX]OFF.	Disable the RS232 remote-control mode for HDBT output [XX] that the matrix switcher cannot be controlled from remote PC. [XX]=00-04. The "[XX]=00" represents all HDBT outputs.	RS232RCM00OFF. RS232 Remote 01 Control MCU OFF! RS232 Remote 02 Control MCU OFF! RS232 Remote 03 Control MCU OFF!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Feedback
		RS232 Remote 04 Control MCU OFF!
STA_RS232RCM.	Report the RS232 remote-control mode status.	RS232 Remote 01 Control MCU OFF! RS232 Remote 02 Control MCU OFF! RS232 Remote 03 Control MCU OFF! RS232 Remote 04 Control MCU OFF!
IRRCM[XX]ON.	Enable the IR remote-control mode for HDBT output [XX] that the matrix switcher can be controlled by the IR remote at the far-end HDBaseT receivers' position. [XX]=00~04. The "[XX]=00" represents all HDBT outputs.	IRRCM00ON.
		IR Remote 01 Control MCU ON! IR Remote 02 Control MCU ON! IR Remote 03 Control MCU ON! IR Remote 04 Control MCU ON!
IRRCM[XX]OFF.	Disable the IR remote-control mode for HDBT output [XX] that the matrix switcher cannot be controlled by the IR remote at the far-end HDBaseT receivers' position. [XX]=00~04. The "[XX]=00" represents all HDBT outputs.	IRRCM00OFF.
		IR Remote 01 Control MCU OFF! IR Remote 02 Control MCU OFF! IR Remote 03 Control MCU OFF! IR Remote 04 Control MCU OFF!
STA_IRRCM.	Report the IR remote-control mode status.	IR Remote 01 Control MCU ON! IR Remote 02 Control MCU ON! IR Remote 03 Control MCU ON! IR Remote 04 Control MCU ON!
@OUT[XX].	Turn on output [XX]. [XX]=00~04. The "[XX]=00"	@OUT00.

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Feedback
	represents all outputs. [XX]=01~04, represents HDBT output 1~4.	Turn ON Output 01! Turn ON Output 02! Turn ON Output 03! Turn ON Output 04!
\$OUT[XX].	Turn off output [XX]. [XX]=00~04. The "[XX]=00" represents all outputs. [XX]=01~04, represents HDBT output 1~4.	\$OUT00. Turn OFF Output 01! Turn OFF Output 02! Turn OFF Output 03! Turn OFF Output 04!
STA_POUT.	Report the on/off status of all outputs.	Turn ON Output 01! Turn ON Output 02! Turn ON Output 03! Turn ON Output 04!
STA.	Report all system status.	GUI Or RS232 Query Status: HDBaseT Matrix MUH44T-H3 V1.0.0 Power ON! HDBT Power ON! Front Panel UnLock! Local RS232 Baudrate Is 9600! GUI_IP:192.168.0.178! Output 01 Switch To In 01!
STA_IN.	Report the connection status of all HDMI input ports.	IN 1 2 3 4 LINK N N N Y
STA_OUT.	Report the connection status of all HDMI and HDBT outputs.	OUT 1 2 3 4 LINK N N N Y
PHDBT[xx]ON.	HDBT OUT POC power supply on, [xx] select the number of HDBT, 00 means all outputs, 01 means output HDBT1, 02 means output HDBT2	PHDBT01ON. HDBT 01 Power ON!
PHDBT[xx]OFF.	HDBT OUT POC power supply off, [xx] select the number of HDBT, 00 means all outputs, 01 means output HDBT1, 02 means output HDBT2	PHDBT01OFF. HDBT 01 Power OFF!
RXAUDIOSEL[xx]:PASS.	Select the RX dial mode as PASS, [xx] The value is 00-04, 00 means all, 01 means HDBT1.	RXAUDIOSEL01:PASS. RX 01 Audio Select PASS In!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Feedback
RXAUDIOSEL[xx]:HDMI.	Select the RX dial mode as HDMI, [xx] The value is 00-04, 00 means all, 01 means HDBT1.	RXAUDIOSEL01:HDMI. RX 01 Audio Select HDMI In!
RXAUDIOSEL[xx]:SPDIF.	Select the RX dial mode as SPDIF, [xx] The value is 00-04, 00 means all, 01 means HDBT1.	RXAUDIOSEL01:SPDIF. RX 01 Audio Select SPDIF In!
STA_RXAUDIO.	Query the ARC DIP mode of all RXs	RX 01 Audio Select HDMI In! RX 02 Audio Select HDMI In! RX 03 Audio Select SPDIF In! RX 04 Audio Select HDMI In!
IRON.	The front panel infrared reception control is turned on.	Set IR FRONT PANEL ON!
IROFF.	The front panel infrared receiver control is turned off.	Set IR FRONT PANEL OFF!

8.3.2 Signal Switching

Command	Description	Command Example and Response
IRFVON.	Enable the IR switching to follow the video switching.	IR Follow Video ON!
IRFVOFF.	Disable the IR switching to follow the video switching.	IR Follow Video OFF!
OUT[XX]:[YY].	Switch video input [YY] to video output [XX]. [XX]=00~04, [YY]=01~04. The "[XX]=00" represents all outputs.	OUT01:04.
		Output 01 Switch To In 04!
STA_VIDEO.	Report the input channel for all outputs.	Output 01 Switch To In 01! Output 02 Switch To In 02! Output 03 Switch To In 03! Output 04 Switch To In 04!
IR[XX]:[YY].	Switch far-end IR IN [YY] to local IR OUT [XX]. [XX]=01~04, [YY]=00~04. The "[YY]=00" represents all far-end IR IN ports.	IR01:03.
		Local 01 IR Out Switch To Remote 03 IR IN!
STA_IR.	Report IR switching status.	IR Follow Video ON! Local 01 IR Out Switch To Remote 01 IR IN! Local 02 IR Out Switch To

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Response
		Remote 02 IR IN! Local 03 IR Out Switch To Remote 03 IR IN! Local 04 IR Out Switch To Remote 04 IR IN!
PresetSave[XX].	Store the current switching status to present [XX]. XX=01~09.	PresetSave01. Preset 01 Save Success! Preset 01 Sta: Out 01 In 01! Out 02 In 02! Out 03 In 03! Out 04 In 04!
PresetRecall[XX].	Recall present [XX]. [XX]=01~09.	PresetRecall02. Preset 02 Recall: Output 01 Switch To In 02! Local 02 IR Out Switch To Remote 01 IR IN! Output 02 Switch To In 02! Local 02 IR Out Switch To Remote 02 IR IN! Output 03 Switch To In 02! Local 02 IR Out Switch To Remote 03 IR IN! Output 04 Switch To In 02! Local 02 IR Out Switch To Remote 04 IR IN!
PresetSta[XX].	Report the preset [XX]. [XX]=01~09.	PresetSta01. Preset 01 Sta: Out 01 In 01! Out 02 In 01! Out 03 In 01! Out 04 In 01!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

8.3.3 Audio Setting

Command	Description	Command Example and Response																												
SPDIF[XX]:[YY].	Select audio source [YY] for SPDIF audio output [XX]. [XX]=00~04, The "[XX]=00" represents all SPDIF audio outputs. [YY]=01~12.	SPDIF01:04.																												
	<table border="1"> <thead> <tr> <th>[YY]</th> <th>Audio Source</th> <th>[YY]</th> <th>Audio Source</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>In1 Breakout</td> <td>07</td> <td>Out3 Breakout</td> </tr> <tr> <td>02</td> <td>In2 Breakout</td> <td>08</td> <td>Out4 Breakout</td> </tr> <tr> <td>03</td> <td>In3 Breakout</td> <td>09</td> <td>Out1 ARC</td> </tr> <tr> <td>04</td> <td>In4 Breakout</td> <td>10</td> <td>Out2 ARC</td> </tr> <tr> <td>05</td> <td>Out1 Breakout</td> <td>11</td> <td>Out3 ARC</td> </tr> <tr> <td>06</td> <td>Out2 Breakout</td> <td>12</td> <td>Out4 ARC</td> </tr> </tbody> </table>	[YY]	Audio Source	[YY]	Audio Source	01	In1 Breakout	07	Out3 Breakout	02	In2 Breakout	08	Out4 Breakout	03	In3 Breakout	09	Out1 ARC	04	In4 Breakout	10	Out2 ARC	05	Out1 Breakout	11	Out3 ARC	06	Out2 Breakout	12	Out4 ARC	SPDIF Out 01 Switch To Video In 04!
	[YY]	Audio Source	[YY]	Audio Source																										
	01	In1 Breakout	07	Out3 Breakout																										
	02	In2 Breakout	08	Out4 Breakout																										
	03	In3 Breakout	09	Out1 ARC																										
	04	In4 Breakout	10	Out2 ARC																										
05	Out1 Breakout	11	Out3 ARC																											
06	Out2 Breakout	12	Out4 ARC																											
STA_SPDIF.	Report SPDIF audio status.	SPDIF Out 01 Switch To Video In 01! SPDIF Out 02 Switch To Video In 02! SPDIF Out 03 Switch To Video In 03! SPDIF Out 04 Switch To Video In 04!																												
AVOLUME[XX]:[YY].	Set the volume of analog L+R audio output [XX] to [YY]. [XX]=00~04, The "[XX]=00" represents all L+R audio outputs.	AVOLUME00:V+. AVOLUME00:V-. AVOLUME01:MU. AVOLUME01:UM. AVOLUME01:05. AVOLUME01:100.																												
	<table border="1"> <thead> <tr> <th>[YY]</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>V+</td> <td>Volume Up</td> </tr> <tr> <td>V-</td> <td>Volume down</td> </tr> <tr> <td>MU</td> <td>Mute</td> </tr> <tr> <td>UM</td> <td>Unmute</td> </tr> <tr> <td>00~100</td> <td>Volume value</td> </tr> </tbody> </table>	[YY]	Description	V+	Volume Up	V-	Volume down	MU	Mute	UM	Unmute	00~100	Volume value	Analog Out 01 Volume 61! Analog Out 02 Volume 61! Analog Out 03 Volume 61! Analog Out 04 Volume 61! Analog Out 01 Volume Mute! Analog Out 02 Volume Mute! Analog Out 03 Volume Mute! Analog Out 04 Volume Mute!																
	[YY]	Description																												
	V+	Volume Up																												
	V-	Volume down																												
	MU	Mute																												
	UM	Unmute																												
00~100	Volume value																													

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Response
		Analog Out 01 Volume UnMute! Analog Out 02 Volume UnMute! Analog Out 03 Volume UnMute! Analog Out 04 Volume UnMute!
ANALOG[XX]:[YY].	The analog ANALOG OUT selects the number of input audio sources, [YY] The value is 01-12, 01-04 means de-embedding audio from input HDMI1-4, 05-08 means de-embedding audio from HDBT output 1-4, 09-12 means outputting ARC return from HDBT 1-4 audio.	ANALOG01:04. Analog Out 01 Switch To Video In 04!
STA_ANALOG.	Report analog L+R audio status.	Analog Out 01 Switch To Video In 01! Analog Out 01 Volume UnMute! Analog Out 01 Volume 60! Analog Out 02 Switch To Video In 02! Analog Out 02 Volume UnMute! Analog Out 02 Volume 60! Analog Out 03 Switch To Video In 03! Analog Out 03 Volume UnMute! Analog Out 03 Volume 60! Analog Out 04 Switch To Video In 04! Analog Out 04 Volume UnMute! Analog Out 04 Volume 60!
HDMIARCFVON.	HDMIARC turns on following video switching	HDMI ARC Follow Video ON!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Response
HDMIARCFVOFF.	HDMIARC follows video switching off	HDMI ARC Follow Video OFF!
HDMIARC[xx]:[YY].	HDMIARC HDMI port select the ARC of the first HDBT [xx] The value is 00-04, 00 means all, 01 means HDMI1. [YY] is 01-04, 01 means HDBT1.	HDMIARC01:01. HDMI IN 01 Switch To ARC/eARC 01!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

8.3.4 HDCP Setting

Command	Description	Command Example and Response
HDCP[XX]MAT	<p>The HDCP content of output [XX] follows the HDCP version of display device.</p> <p>[XX]=00~04.</p> <p>[XX]=00, represents all outputs.</p> <p>[XX]=01~04, represents HDBT output 1~4.</p>	HDCP00MAT.
		<p>OUT 01 HDCP MAT Display!</p> <p>OUT 02 HDCP MAT Display!</p> <p>OUT 03 HDCP MAT Display!</p> <p>OUT 04 HDCP MAT Display!</p>
HDCP[XX]PAS.	<p>Set the HDCP mode of output [XX] to Passive.</p> <p>The HDCP content of output [XX] automatically follows the HDCP version of source device.</p> <p>[XX]=00~04.</p> <p>[XX]=00, represents all outputs.</p> <p>[XX]=01~04, represents HDBT output 1~4.</p>	HDCP00pAS.
		<p>OUT 01 HDCP PASSIVE!</p> <p>OUT 02 HDCP PASSIVE!</p> <p>OUT 03 HDCP PASSIVE!</p> <p>OUT 04 HDCP PASSIVE!</p>
HDCP[xx]ACT.	<p>Set the HDCP mode of output [XX] to Active.</p> <p>If the input video has HDCP content, the HDCP version of HDMI output is HDCP 1.4 for broader video solution. If the input video has no HDCP content, the HDMI output has no HDCP too.</p> <p>[XX]=00~08.</p> <p>[XX]=00, represents all outputs.</p> <p>[XX]=01~04, represents HDBT output 1~4.</p>	HDCP00ACT.
		<p>OUT 01 HDCP ACTIVE!</p> <p>OUT 02 HDCP ACTIVE!</p> <p>OUT 03 HDCP ACTIVE!</p> <p>OUT 04 HDCP ACTIVE!</p>
HDCP[xx]ON.	<p>Force open the output HDCP, output HDCP1.4.</p> <p>[XX]=00~04.</p> <p>[XX]=00, represents all outputs.</p> <p>[XX]=01~04, represents HDBT output 1~8</p>	HDCP00ON.
		<p>OUT 01 HDCP ON!</p> <p>OUT 02 HDCP ON!</p> <p>OUT 03 HDCP ON!</p> <p>OUT 04 HDCP ON!</p>
HDCP[xx]OFF.	<p>Force turn off the output HDCP</p> <p>[XX]=00~04.</p> <p>[XX]=00, represents all outputs.</p> <p>[XX]=01~04, represents HDBT output 1~4.</p>	HDCP00OFF.
		<p>OUT 01 HDCP OFF!</p> <p>OUT 02 HDCP OFF!</p> <p>OUT 03 HDCP OFF!</p> <p>OUT 04 HDCP OFF!</p>

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Response
STA_HDCP.	Report the HDCP mode of all outputs.	OUT 01 HDCP BYPASS! OUT 02 HDCP BYPASS! OUT 03 HDCP BYPASS! OUT 04 HDCP BYPASS! OUT 05 HDCP BYPASS! OUT 06 HDCP BYPASS! OUT 07 HDCP BYPASS! OUT 08 HDCP BYPASS!

8.3.5 EDID Management

Command	Description	Command Example and Response	
EDIDMInit.	Reset factory default EDID to all input ports.	All Input EDID Set Default!	
EDIDUpgrade[XX].	Upgrade the EDID data of the input port [XX]. [XX]=00~04, U. [XX]=00, represents all inputs. [XX]=01~04, represents HDMI input 1~4. [XX]=U, upload a user-defined EDID. The EDID can be saved for invoking at any time. When the command applied, system prompts to upload the EDID file (.bin). Operation will be cancelled in 10 seconds. Please disconnect HDBT connection before sending command to ensure the data can be received successfully.	EDIDUpgrade01.	
		EDIDUpgradeU.	
EDID/[XX]/[YY].	The input [XX] recall the embedded EDID [YY]. [XX]=00~04. The "00" represents all inputs. [YY]=01~07.	256 9600bps Input XX/User Define EDID Upgrade OK By RS232 Or GUI!	
		EDID/03/01.	
		Input 03 EDID Upgrade OK By 01 Internal EDID!	
		[YY]	EDID
		01	1080p 2CH
		02	1080p MultiCH
		03	4K@30Hz HDR 2CH
		04	4K@30Hz HDR MultiCH
05	4K@60Hz HDR 2CH		
06	4K@60Hz HDR MultiCH		
07	User-defined EDID		

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example and Response
EDIDGOUT[XX].	Report the EDID data from output [XX]. [XX]=01~04. [XX]=01~04, represents HDBT output 1~4.	EDIDGOUT04.
		EDIDOUT04:
EDIDM[XX]B[YY].	Copy the EDID data of output [XX] to input [YY]. [XX]=01~04, [YY]=00~04. [XX]=01~04, represents HDBT output 1~4. [YY]=00, represents all inputs. [YY]=01~04, represents HDMI input 1~4.	EDIDM04B01.
		Input 01 EDID Upgrade OK By 04 EXT EDID!
EDIDSTA[XX].	Report the EDID status of input [XX]. [XX]=00~04. [XX]=00, represents all inputs. [XX]=01~04, represents HDMI input 1~4.	EDIDSTA00.
		Input 01 EDID From 01 Internal EDID! Input 02 EDID From 01 Internal EDID! Input 03 EDID From 01 Internal EDID! Input 04 EDID From 01 Internal EDID!

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

8.3.6 Third-party Device Control

Command	Description	Command Example
/+[X]/[YY]:xxx.	<p>Send the ASCII command “xxx” to control the far-end third-party device.</p> <ul style="list-style-type: none"> • xxx: ASCII string. • The “[X]=1~7” represents the baud rate of third-party device. <ul style="list-style-type: none"> [X]=1, the baud rate is 2400 [X]=2, the baud rate is 4800 [X]=3, the baud rate is 9600 [X]=4, the baud rate is 19200 [X]=5, the baud rate is 38400 [X]=6, the baud rate is 57600 [X]=7, the baud rate is 115200 • The “[YY]=00” represents all HDBT outputs. • The “[YY]=01~04” represents the HDBT output 1~4. 	<p>/+3/01:123456.</p>
		<p>Send the ASCII command “123456.” to the far-end third-party device whose baud rate is 9600.</p> <p>The third-party device is connected to the far-end HDBaseT receiver of connecting the HDBT output 1 port.</p>
CMDON/+[X]/[YY]:xx.	<p>When power on the matrix switcher, automatically send ASCII command “xxx” to power on far-end third-party device.</p> <ul style="list-style-type: none"> • xxx: ASCII string. • The “[X]=1~7” represents the baud rate of third-party device. <ul style="list-style-type: none"> [X]=1, the baud rate is 2400 [X]=2, the baud rate is 4800 [X]=3, the baud rate is 9600 [X]=4, the baud rate is 19200 [X]=5, the baud rate is 38400 [X]=6, the baud rate is 57600 [X]=7, the baud rate is 115200 • The “[YY]=00” represents all HDBT outputs. • The “[YY]=01~04” represents the HDBT output 1~4. 	<p>CMDON/+3/01:123456.</p>
		<p>When power on the matrix switcher, automatically send ASCII command “123456” to the far-end third-party device.</p> <p>The third-party device is connected to the far-end HDBaseT receiver of connecting the HDBT output 1 port.</p>
CMDOFF/+[X]/[YY]:xx.	<p>When power off the matrix switcher, automatically send ASCII command “xxx” to power off far-end third-party device.</p> <ul style="list-style-type: none"> • xxx: ASCII string. • The “[X]=1~7” represents the baud rate of third-party device. <ul style="list-style-type: none"> [X]=1, the baud rate is 2400 	<p>CMDOFF/+3/01:123456.</p>
		<p>When power off the matrix switcher, automatically send ASCII command “123456” to the far-end third-party device.</p> <p>The third-party device is</p>

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

Command	Description	Command Example
	[X]=2, the baud rate is 4800 [X]=3, the baud rate is 9600 [X]=4, the baud rate is 19200 [X]=5, the baud rate is 38400 [X]=6, the baud rate is 57600 [X]=7, the baud rate is 115200 ● The “[YY]=00” represents all HDBT outputs. ● The “[YY]=01~04” represents the HDBT output 1~4.	connected to the far-end HDBaseT receiver of connecting the HDBT output 1 port.

8.3.7 CEC Control

If the input sources and HDBaseT output devices are supports CEC, they can be controlled by sending the following command instead of IR remote.

CEC[I/O][AA][BB][CC][DD].

- The “[I]” represents the input port. The “[O]” represents the output port.
- The “[AA]” represents the port number. The HDMI input ports are 01~04. The HDBaseT output ports are 01~04.
- The “[AA]” is “FF” for sending command to all input or output ports.
- The “[BB]” represents the device type (e.g. TV: 40/20/80; Blu-ray DVD: 04/08).
- The “[CC]” represents the function type (e.g. “44”: Remote control).
- The “[DD]” represents the specific command from the table below.

Uncompressed 18G HDMI Matrix 4x4 over HDBaseT3.0

✓ Control the input source:

Command	Description	Command Example and Response
CECI[AA][BB][CC]00.	Confirm operation (Enter).	CECI02044400
		CEC Input 02 Send Success!
CECI[AA][BB][CC]01.	UP direction.	CECI01044401.
		CEC Input 01 Send Success!
CECI[AA][BB][CC]02.	DOWN direction.	CECI01044402.
		CEC Input 01 Send Success!
CECI[AA][BB][CC]03.	LEFT direction.	CECI03044403.
		CEC Input 03 Send Success!
CECI[AA][BB][CC]04.	RIGHT direction.	CECI03044404.
		CEC Input 03 Send Success!
CECI[AA][BB][CC]09.	Back to submenu.	CECI03044409.
		CEC Input 03 Send Success!
CECI[AA][BB][CC]0A.	Enter main menu.	CECI0304440A.
		CEC Input 03 Send Success!
CECI[AA][BB][CC]0D.	Exit menu.	CECI0204440D.
		CEC Input 02 Send Success!
CECI[AA][BB][CC]6D.	Power on.	CECI0204446D.
		CEC Input 02 Send Success!
CECI[AA][BB][CC]6C.	Power off.	CECI0204446C.
		CEC Input 02 Send Success!

✓ Control the output display device:

Command	Description	Command Example and Response
CECO[AA][BB][CC]41.	Volume up.	CECO05404441.
		CEC Output 05 Send Success!
CECO[AA][BB][CC]42.	Volume down.	CECO05404442.
		CEC Output 05 Send Success!
CECO[AA][BB][CC]43.	Mute	CECO05404443.
		CEC Output 05 Send Success!
CECO[AA][BB]04.	Power on.	CECO038004.
		CEC Output 03 Send Success!
CECO[AA][BB]36.	Power off.	CECO038036.
		CEC Output 03 Send Success!

9. Firmware Upgrade

Please follow the steps as below to upgrade firmware by the **FW** port on the rear panel:


- 1) Prepare the latest two upgrade files and rename them as "08010000.APP" on PC.
- 2) Power off the switcher, and connect the **FW** port of switcher to the PC with USB cable.
- 3) Power on the switcher, and then the PC will automatically detect a U-disk named of "BOOTDISK".
- 4) Double-click the U-disk, a file named of "READY.TXT" would be showed.
- 5) Directly copy one of two upgrade files (e.g. "08010000.APP") to the "BOOTDISK" U-disk.
- 6) Reopen the U-disk to check the filename "READY.TXT" whether automatically becomes "SUCCESS.TXT", if yes, the firmware was updated successfully, otherwise, the firmware updating is fail, the name of upgrade file should be confirm again, and then follow the above steps to update again.
- 7) Remove the USB cable after firmware upgrade.
- 8) After firmware upgrade, the switcher should be restored to factory default by sending command.

4x4 HDMI 2.0 HDBaseT Matrix Switcher

10. Panel Drawing



MUH44T-H3 Matrix Switcher

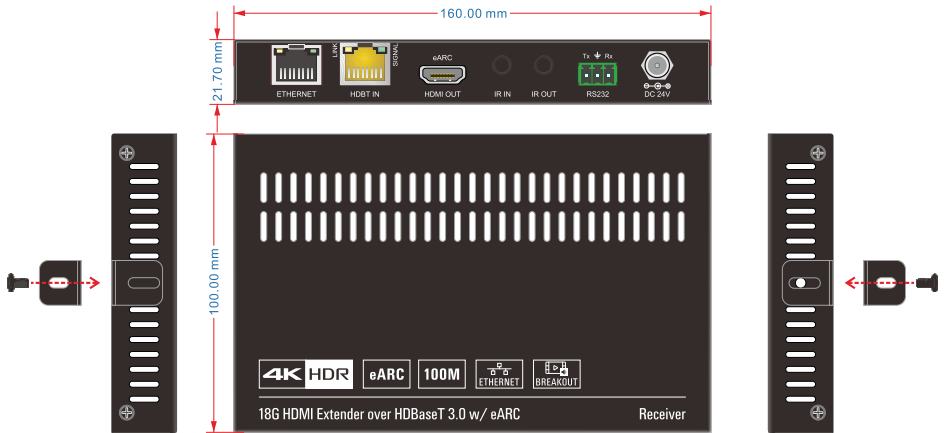

TPUH670R HDBaseT Receiver

11. Troubleshooting & Maintenance

Problems	Potential Causes	Solutions
Output image with snowflake.	Bad quality of the connecting cable.	Try another high-quality cable.
	Fail or loose connection.	Make sure the connection is good.
No output image when switching.	No signal at the input / output end.	Check with oscilloscope or multimeter if there is any signal at the input/ output end.
	Fail or loose connection.	Make sure the connection is good.
	The product is broken.	Send it to authorized dealer for repairing.
POWER indicator doesn't work or no respond to any operation.	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally.	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
Static becomes stronger when connecting the video connectors.	Bad grounding.	Check the grounding and make sure it is connected well.
Cannot control the device by control device (e.g. a PC) through RS232 port.	Wrong RS232 communication parameters.	Type in correct RS232 communication parameters.
	Broken RS232 port.	Send it to authorized dealer for checking.
Cannot control the device by front panel buttons while can control it through RS232 port	The front panel buttons are locked.	Send command !%Unlock ; to unlock the front panel buttons.

Note: If your problem still remaining after following the above troubleshooting steps, please contact your local dealer or distributor for further assistance.

12. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

1) Warranty

The limited warranty period of the product is fixed three years.

2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

3) Warranty Exclusion

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - ✓ Normal wear and tear.
 - ✓ Use of supplies or parts not meeting our specifications.
 - ✓ No certificate or invoice as the proof of warranty.
 - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - ✓ Damage caused by force majeure.
 - ✓ Servicing not authorized by distributor.
 - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

4) Documentation

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

Remarks: Please contact your local distributor for further assistance or solutions.

Liberty

Phone: 719-260-0061

Fax: 719-260-0075

Toll-Free: 800-530-8998

Email: supportlibav@libav.com